OZONOS®

QUICK START GUIDE

OZONOS TRIPOD

STARTUP

IMPORTANT INFORMATION

This manual describes the correct installation of the device. Please follow all steps properly and observe warnings and notes!

SETUP OZONOS TRIPOD



STEP I

Mount the holder for the OZONOS Aicleaner firmly on the thread of the tripod.



STEP 2

Loosen the locking screw of the tripod legs until they can be moved.



STEP 3

Pull your legs apart to a maximum angle where they are stable. Tighten the locking screw again.



STEP 4


Loosen the locking screw on the wheel and insert the metal piece.



STEP 5

wieder fest.

Now attach the roll. The brake must point outwards and the locking screw inwards! Ziehen sie nun die Feststellschraube

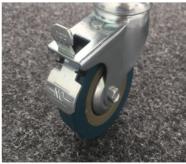


STEP 6

Tighten the brake of the mounted wheel.

Repeat steps 4-6 for all three wheels.

OZONOS®

ATTACHING OZONOS AIRCLEANER

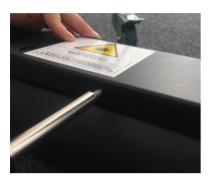

STEP I

Loosen the screw of the wall bracket on the longside of the OZONOS. Now slide the wall bracket off the unit.



STEP 2

Slide the device onto the holder of the tripod.

Start on the unrounded side of the holder.



STEP 3

Screw the device onto the holder of the tripod. Use the crew from Step I.

ATTENTION!

Please release the brakes of the tripod only for moving!

Please make sure that all screws are always tight!

Always extend the legs to the maximum angle to ensure a stable stand of the tripod!

TECHNICAL DATE:

DESCRIPTION OZONOS TRIPOD:

DIAMETER	33-29-25 mm
HEIGHT	maximum 300cm
NET-WEIGHT	I,6 kg
LOAD	9 kg

OPERATING **INSTRUCTIONS FOR** THE OZONOS AC-I SERIES

WWW.OZONOS.COM/ANLEITUNGEN



DO YOU HAVE ANY QUESTIONS? CONTACT US NOW:

OZONOS GmbH

Ginzkeyplatz II 5020 Salzburg · Austria **T** +43 (0) 662 / 238 288 - 0 **F** +43 (0) 662 / 238 288 - 99 **W** www.ozonos.com

M frischluft@ozonos.com

2020/10